

MEETS SPECIFICATIONS OF



EN ISO:3059

SPECTRO-UV®

uVision™ 365 STANDARD SERIES



Also Available

IP Rated, Fanless LED UV-A Inspection Lamps

UV-365ES, UV-365EH, & UV-365MEH

- ▶ Compact, cost-effective handheld inspection lamps
- ▶ Available in two intensities to suit your specific needs: **standard-intensity & high-intensity**
- ▶ Can be used in forensics, specialty UV applications, and NDT/NDE
- ▶ Mobile AC/DC version available!

IP65
RATED



Dust Tight & Water Resistant



Fanless & Cool Running



Lightweight & Rugged

FOR FLUORESCENT INSPECTION IN ANY INDOOR / OUTDOOR ENVIRONMENT

3 UV-A LEDS
For wide and even area of coverage

WHITE LIGHT LED
Allows for scanning surface flaws

LONG-LASTING UV-A LENSES
Reduce the rate of solarization

EASY CONTROL
Grip-mounted, three-way rocker switch (white light/off/UV)

FANLESS DESIGN
Maintains optimum lamp temperature using state-of-the-art heat sinks

PISTOL GRIP
Comfortable, balanced control



CERTIFICATE OF LIGHT OUTPUT
included with lamp



uVision™ 365 UV-365 STANDARD SERIES

MODEL	NOMINAL STEADY-STATE UV-A (365 nm) INTENSITY at 15 in (38 cm) ①	VISIBLE LIGHT MEASUREMENT	UV-A COVERAGE AREA at 15 in (38 cm) at minimum 1,000 μW/cm²	AC/DC MOBILE VERSION
UV-365ES*	4,700 μW/cm²	< 1 foot-candle (11 lux)	6.5 in (16.5 cm) Diameter	
UV-365EH*	7,000 μW/cm²	< 1 foot-candle (11 lux)	7 in (17.8 cm) Diameter	
UV-365MEH*	7,000 μW/cm²	< 1 foot-candle (11 lux)	7 in (17.8 cm) Diameter	●

- Light Source:** (3) UV-A LEDs, (1) white light LED
- Lamp Style:** Pistol grip
- Lamp Head Diameter:** 3.3 in (8.38 cm)
- Height:** 7.5 in (19 cm)
- Width:** 3.5 in (8.9 cm)
- Weight:** 1.7 lb (0.73 kg) (without battery pack)
- White Light LED Intensity:** 400 foot-candles (4,306 lux)
- Power Requirements:** 100-120VAC / 12VDC
(Also available in 230V & 240V versions)
- Battery Pack:** Type: 12V, NiMH (rechargeable)
Run time: 3.5 hours continuous
Charge time: 2 hours



uVision™ 365 AC/DC MOBILE KIT

UV-365MEH

Kit Includes:

Lamp with AC power supply, UV-absorbing spectacles, battery pack with 12V rechargeable NiMH battery, comes in a padded case.









CERTIFICATE OF LIGHT OUTPUT

① UV-A intensity reading taken with the Spectro-UV® AccuMAX™ Series meter, and is factory set to the value shown.

*Each lamp is fitted with an 8-foot cord and the appropriate plug for the country of destination. An optional 20-foot cord is available. The "/20" suffix denotes the 20-foot power cord options.

UV-A Beam Profiles

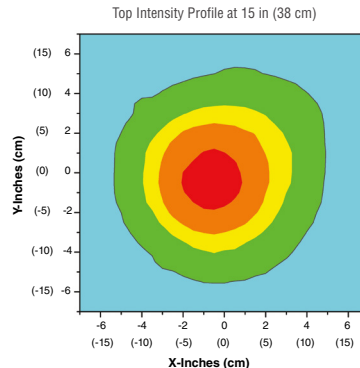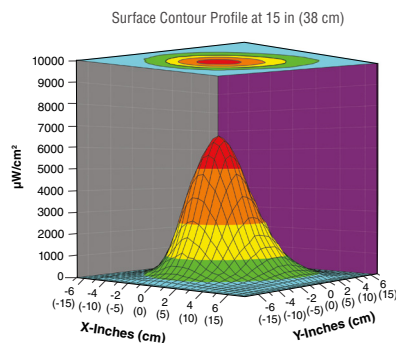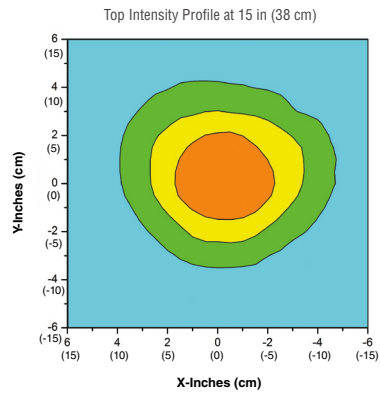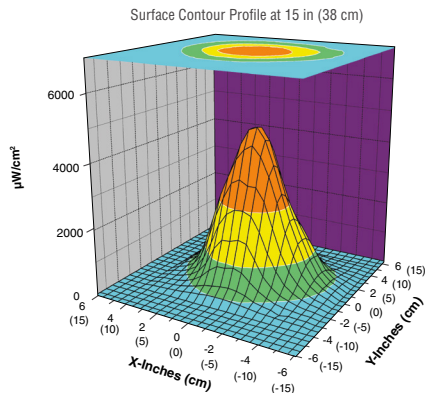

SPECTRO-UV®

www.Spectro-UV.com
4 Dubon Ct., Farmingdale, NY 11735
866-230-7305